


## NU PRO MILLWORK

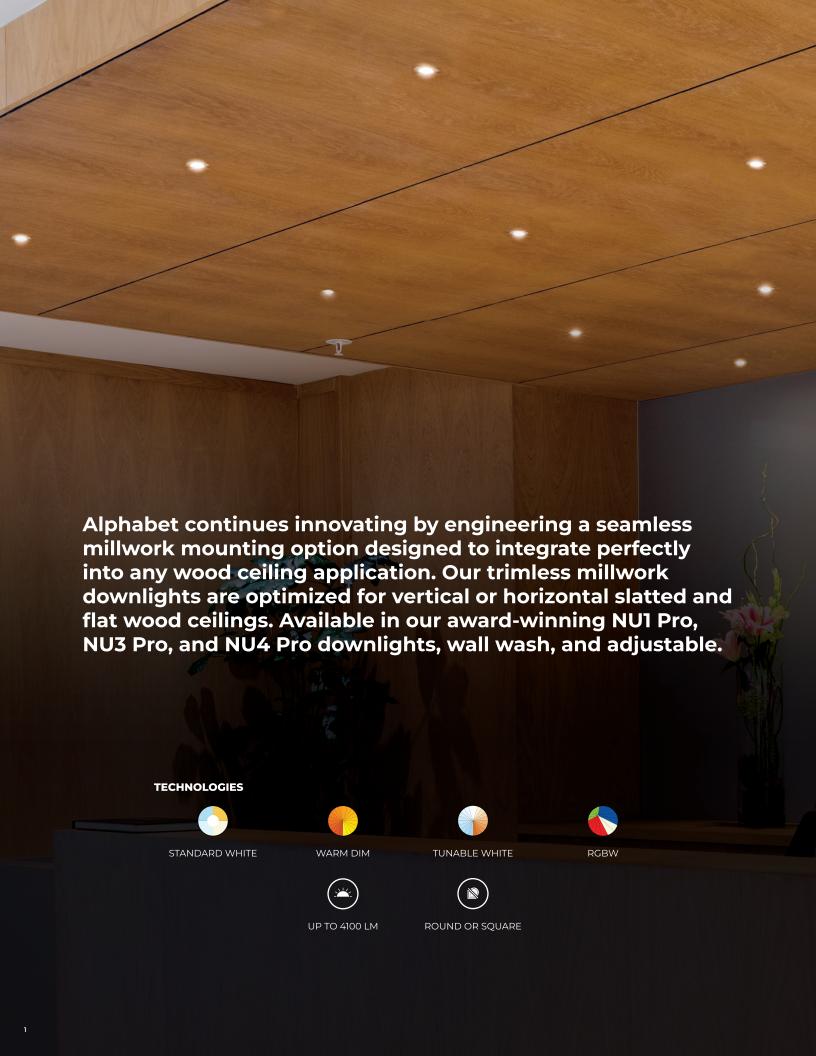





## **EASY INSTALLATION**



**STEP 1**POSITION MOUNTING BRACKET & SPACER



STEP 2
FASTEN MOUNTING BRACKET
TO WOOD



**STEP 3**REMOVE SPACER



**STEP 4**INSTALL LUMINAIRE



**STEP 5**INSTALL TRIM

## **GLARE REDUCTION TRIMS**



**HYPERBOLIC** 



HONEYCOMB



**PINHOLE** 



AlphabetLighting.com

6